

BASIS

BASIS AUDIO, INC.

TURNTABLE DUSTCOVER

USER'S GUIDE

INTRODUCTION

Thank you for purchasing the BASIS Turntable Dustcover. We are confident that you will value the Dustcover as long term protection for your BASIS turntable. The BASIS Dustcover will fit all 2000 Series turntables with or without a Calibrator, and the Inspiration turntable. Assembly is quick and easy.

The Dustcover top plate is precision-machined acrylic which supports a fabric cover, while protecting your tonearm and cartridge. There are four acrylic legs which are to be secured to the top plate with screws. The black fabric cover then fits over the top plate.

→ *To realize the potential of your new Dustcover, and to prevent any damage that would delay your enjoyment, please carefully read these instructions before attempting to assemble and install your Dustcover.*

UNPACKING AND SETTING UP YOUR DUSTCOVER

NOTE: You will find some white cotton gloves packed with your Dustcover, in the Accessories box. You may wish to use the gloves while you are handling the acrylic pieces, to prevent fingerprinting and scratching of your finely finished Dustcover.

1. Locate the Dustcover Accessories box.
2. Unpack the four acrylic rods which are the legs of the Dustcover, and locate the bag with four screws and the screw driver.
3. Remove the black fabric cover and set it aside.
4. Remove the acrylic top plate and carefully unwrap the white foam which protects it from being scratched. You can use the foam to cover your work surface, while you are assembling the four legs.
5. Each of the four legs is the same length, and has a soft bumper on the bottom end, and a threaded hole in the top end. Assemble one leg at a time by pushing a screw through the hole in the top plate and then screwing a leg onto the screw. Tighten the screw with the screw driver while holding the leg to prevent twisting. Each leg should be tight before moving on to the next.

6. When all four legs are assembled, the dustcover frame is ready to be placed over the turntable. The widest dimension is the front or rear edge. Move the frame slowly and be sure the legs are well clear of the tonearm and any cables.
7. With the dustcover frame in position, drape the black fabric cover onto the frame with the BASIS logo facing the front.

When uncovering your turntable, ALWAYS REMOVE THE BLACK FABRIC COVER FIRST, then carefully lift the frame above the turntable. Move slowly and be sure the legs are clear of the cables and tonearm.