



INSTRUCTIONS FOR THE BASIS REFLEX CLAMP

Congratulations for purchasing the Basis Reflex Record Clamp. Although it is an accessory rather than a full Basis turntable or tonearm, the Basis Clamp is crafted from the same aerospace alloys and executed with the same precision as all Basis products.

The Basis Clamp is designed to flatten moderately warped records by “bowing” the record into contact with the platter. To properly operate, the enclosed O-ring must be placed over the spindle and pushed down onto the platter. The O-ring is then left in place permanently. To operate the clamp, rotate the top knob counter-clockwise. Push the clamp onto the spindle and push down firmly. Note that the springs and bearings of the Basis turntables can not be damaged by pushing down in this manner. While holding the bottom of the clamp with one hand, rotate the top knob of the clamp in the clockwise direction. This will secure the record to the platter.

To remove the Basis Clamp, hold the bottom of the clamp with one hand and rotate the top knob counter-clockwise with the other hand. The clamp will easily pull off.